



## Hand Held Bar Code Reader



**Fit a barcode reader  
to your AutoPilot4Feed Hand Held PDA  
and prevent mistakes  
with bags of supplements, premixes and drugs.**

## Log stock onto site

By fitting a laser barcode reader to a AutoPilot4Feed Hand Held PDA, it can be used to log ingredients onto site or into a drug dispensary. Because the Hand Held connects via a wireless (WIFI) link, bags can even be wanded as they arrive on site.


1. Select the option 'Receive Bags'
2. Wand a bag. The Hand Held checks all the data on the barcode immediately since it is always on-line. It logs the material code, bag size, lot number and expiry date.
3. Enter the number of bags

Since the AutoPilot4Feed Hand Held is always on-line via the wireless link, the barcode is checked immediately and the stock updated, reducing paperwork.


## Fill bins safely using the AutoPilot4Feed Hand Held

When filling micro bins, the AutoPilot4Feed Hand Held can be used to prevent mistakes and update stocks immediately.

1. Select the option 'Fill a bin'
2. Wand a bag. The Hand Held checks all the data on the barcode immediately including material code, bag size, lot number and expiry date.
3. Wand the barcode fitted to the top of each bin. The AutoPilot4Feed Hand Held checks that the bin contains the same material and unlocks the bin (optional)
4. The operator fills the bin and once complete enters the number of bags into the Hand Held

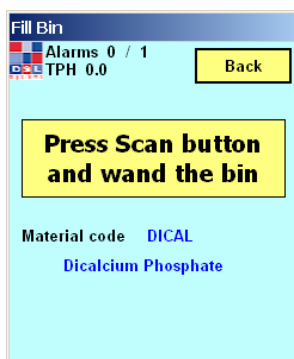

*Wand the barcode*

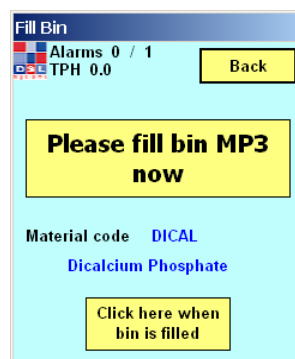

*Fill the bin*



*Enter the number of bags*

The AutoPilot4Feed Hand Held with barcode reader improves quality by preventing mistakes and reduces paperwork.

**For more information contact:  
Comco Manufacturing Ltd.**

**Head Office**  
801 57<sup>th</sup> Street East  
Saskatoon, SK Canada  
S7K 5Z2  
Ph: (306) 652 5005

**USA Office**  
320 Kitty Hawk, Ste. 106  
Universal City, TX  
78148  
Ph: (210)945 0472

**Asia Office**  
63 Mariam Way  
Singapore  
508581  
Ph: (65) 6545 2434

